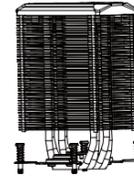
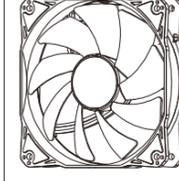



100MM


140MM

Accessories


 Heat Sinksx1	 Fanx1	 Buckle for Fanx2
 For 1700/115X/1366 1700/115X/1366 Bucklex1	 For AMD AMD Bucklex1	 Screws for Bucklex4
 Intel base x1	 Conduction Paste x1	

INTEL


1.Align the base with the holes on the back of the motherboard, and adjust four corners of the base

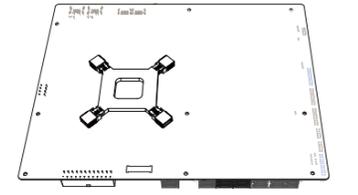


2.Remove the fan

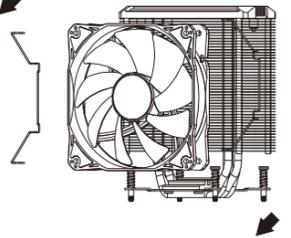


3.Tear the protective film on the back cover

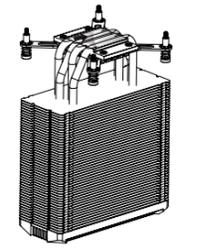


4.Spread the conduction paste evenly over the CPU

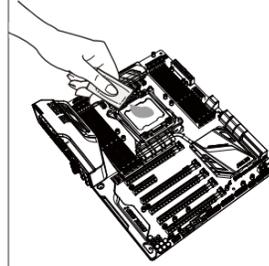


5.Install the heat sinks

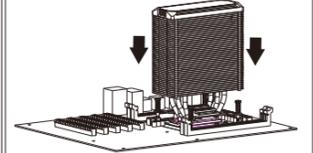

6.Fix the fan

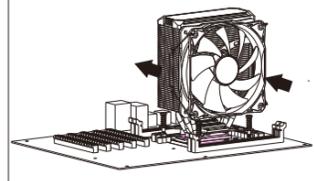


7.plug in the power connector to the pin of CPU Fan on the motherboard

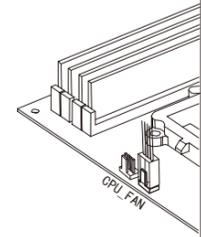


INTEL LGA 2011


1.Tear the protective film on the back cover

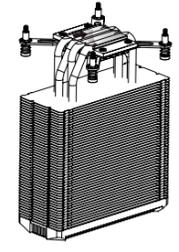


2.Spread the conduction paste evenly over the CPU

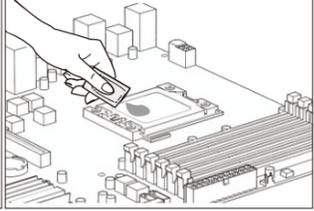


3.Button the heat sinks using 2011/2066 buckle

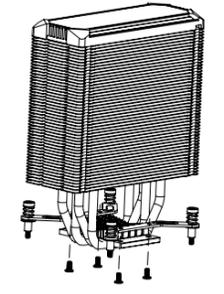


4.Align the heat sinks with the holes on the motherboard

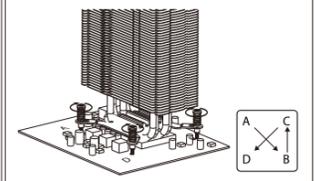


5.Spread the conduction paste evenly over the CPU

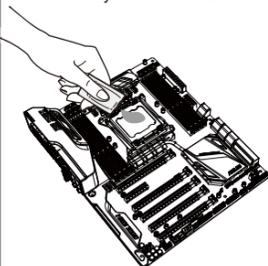


6.Align the heat sinks with the holes on the motherboard.

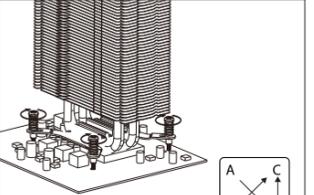

7.Fix the fan

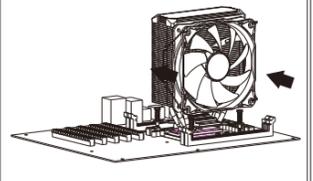


8.plug in the power connector to the pin of CPU Fan

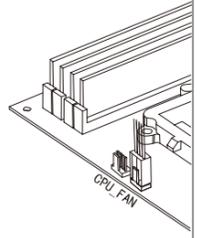


AMD


1.Remove the fan

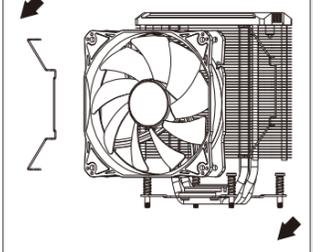


2.Tear the protective film on the back cover

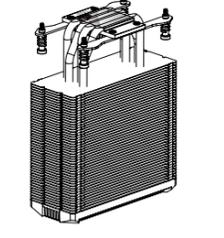


3.Button heat sinks using AMD buckle

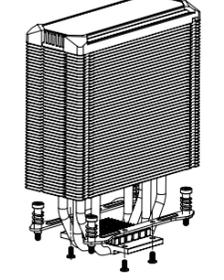


4.Remove the slot on the motherboard

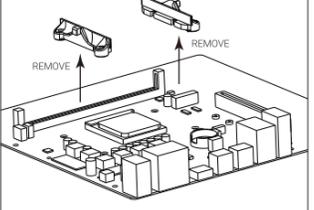


5.Spread the conduction paste evenly over the CPU

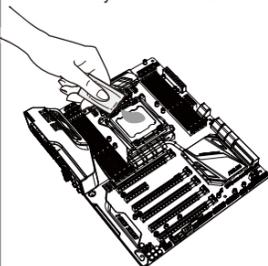


6.Align the heat sinks with the holes on the motherboard.

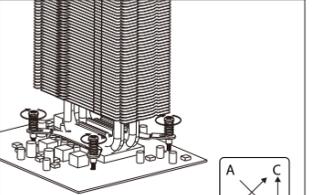

7.Fix the fan

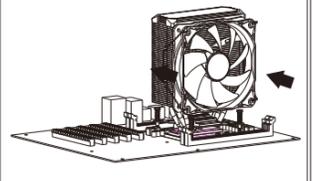

8.plug in the power connector to the pin of CPU Fan

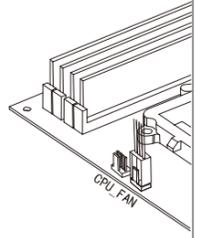

正面

背面